




1. Insert the new Drive unit.

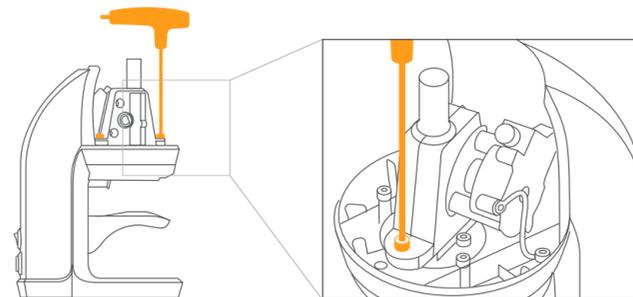

2. Fasten both m5 bolts with Allen key. Make sure they are tight, but not overly tight.

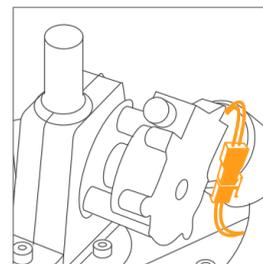


3. Connect the motor cable.

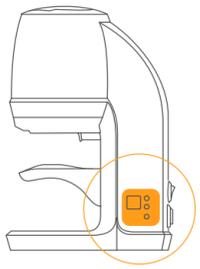

8. Activate the CLEAN mode.




9. Check if the tamper shaft is in the lowered position.

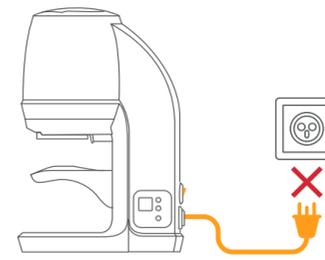


10. Turn OFF the unit and REMOVE the power cable.




11. Insert the tamper base. (NOTE: left-handed thread)

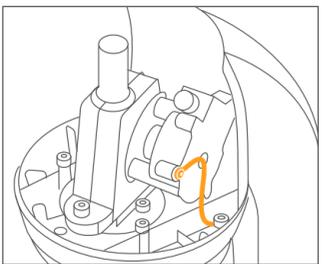


4. Connect the earthing cable to the motor.

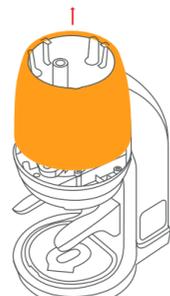

5. Install the middle cover and make sure it is neatly aligned with the main body.

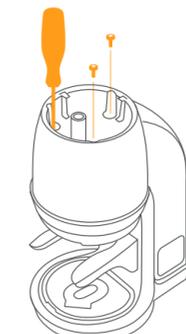


6. Fasten the middle cover with 3 screws using the yellow screw driver.

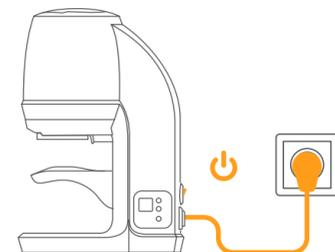


7. Insert the Power Cable, switch ON the unit and activate the CLEAN mode.



12. Fix the tamper base with the M5 bolt using the Allen key.

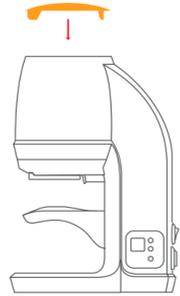

13. Place the top cover

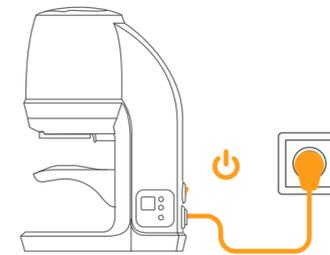

14. Insert the power cable and switch ON the unit.

PUQ[®]
PRESS



DRIVE UNIT REPAIR KIT
Q1/Q2 model

Instruction Manual / For Commercial Use

1

Disclaimer






- Read all instructions carefully before you start with the first step of changing the Drive Unit.
- Make sure to disconnect the power source before opening your Puqpress.
- Incorrect operation and improper use can damage the appliance and may result in injuries, fire or electrical shock.
- For detailed explanation on how to remove- and install the Drive Unit, visit www.puqpress.com/support
- In case of any doubt about changing the Drive Unit after carefully reading these instructions, contact your Puqpress distributor for help.

3


Removing the old DRIVE UNIT

2


Contents of the kit

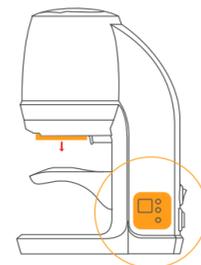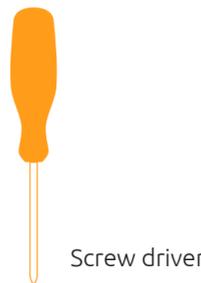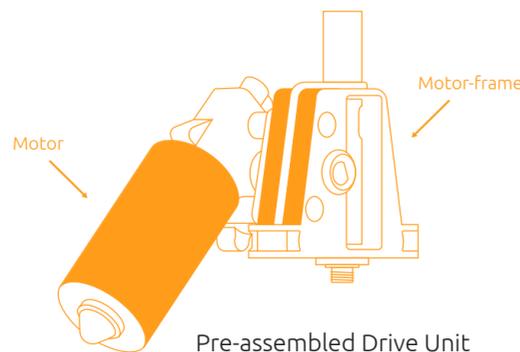

1. Put the unit in CLEAN mode by pressing the CLEAN button.

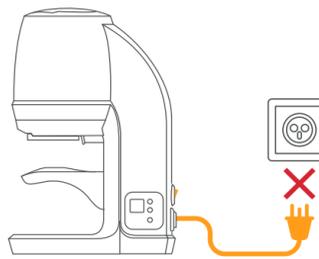

2. Switch OFF the unit and REMOVE the power cable.

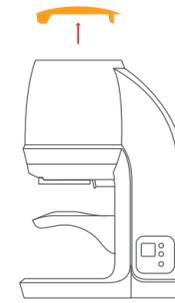


3. Remove the top cover.




4. Unscrew the M5x100mm bolt with the Allen key.




9. Turn OFF the unit and REMOVE the power cable.

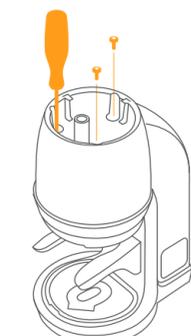

10. Remove three M4 bolts with the yellow screw driver.

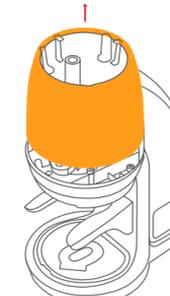

11. Remove the middle cover.

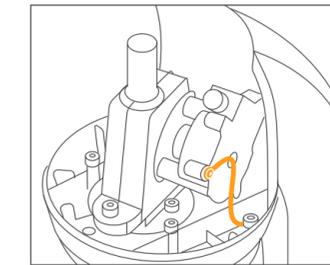

12. Remove the earthing cable from the motor.



5. Remove the M5x100mm bolt.




6. Unscrew the tamper base. (NOTE: left-handed thread)




7. Insert the power cable and switch ON the unit.




8. Check if the tamper shaft is in the upper position.

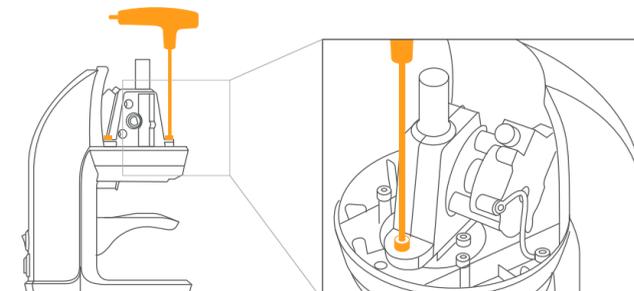

13. Remove both M5 bolts from the motor frame with the Allen key.

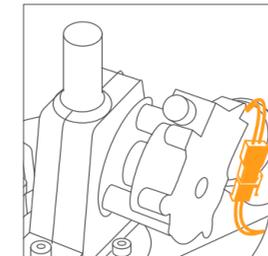

14. Disconnect the motor cable.

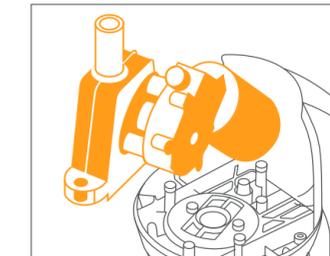

15. Remove the Drive Unit.