

Handle with 2 people!

1. Slide the back of Puqpress M2 over the edge of the table or bar where you want to use your set-up. Connect the Puqpress cable inside in its socket.


2. While lifting the Mythos to place on Puqpress M2, guide the Mythos cable from top to bottom through Puqpress.

3. Choose 1 of 3 directions to guide both cables out. Press the Puqpress cable in the cable-guide behind the clip. Position the Mythos cable in the other cable-guide (without clip).

4. Carefully slide the set-up back onto the bar or table and make sure its standing level.

Hey there!


Set up the Lower Clamp, **before you do anything else.** **Only then,** every tamp will be perfectly level and safe.

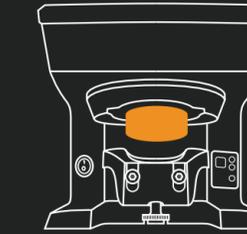


Cleaning during your shift

Coffee can stick to your tamper while making coffees. Give it a quick wipe with a dry towel or cloth and you're good to go again!


Set-up with 2 people!

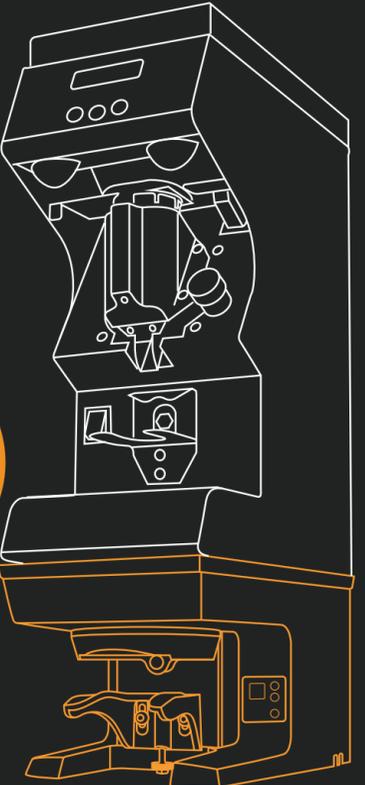


For instruction videos check www.puqpress.com/support

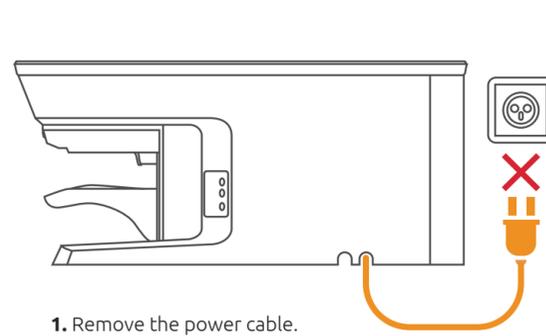

1. Remove the power cable.

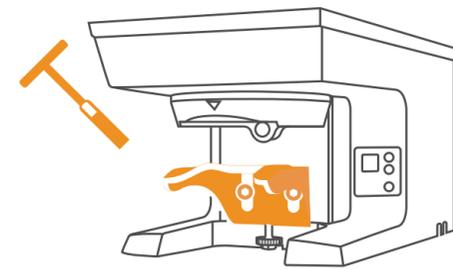


2. Release lower clamp bolts.

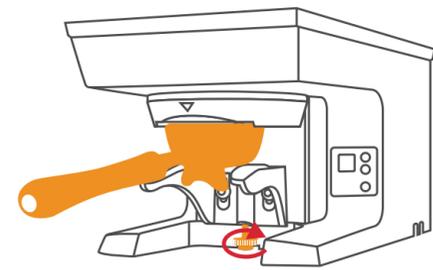

3. Insert the portafilter in-between the upper- and lower clamp. Turn the adjustment wheel clockwise to move the lower clamp up against the Portafilter.



4. Check if all Portafilters fit properly and tighten screws firmly.

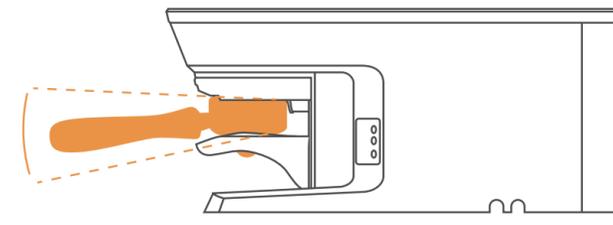

5. Test if the Portafilter fits well. It should not wiggle.




WARNING:
Failure to adjust the lower clamp to optimum working position may allow contact with moving parts.

Portafilter should not wiggle!


Improper lower clamp setting may also cause damage to drive mechanism.

For instruction video check www.puqpress.com/support


Once every week

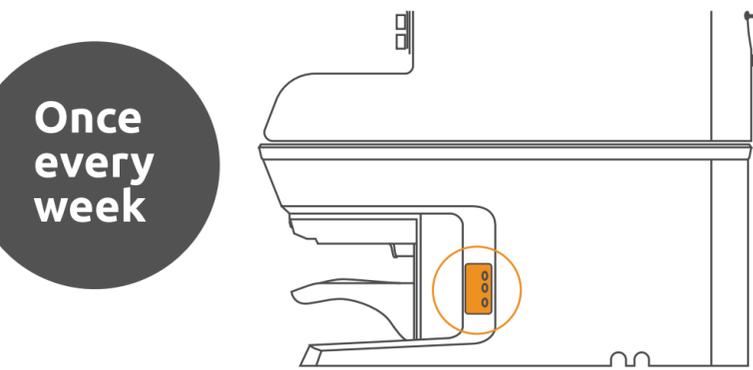


1. Press "Cleaning".

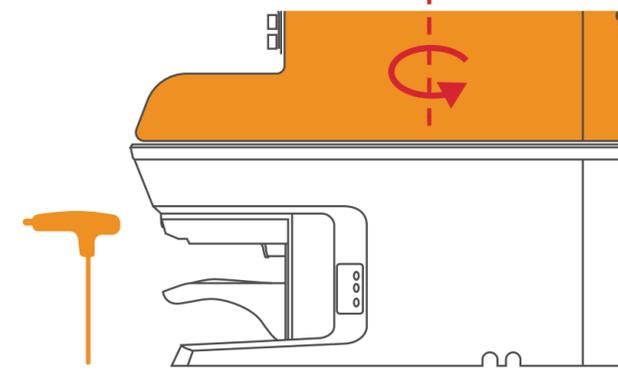


2. Turn the Mythos 90 degrees and get the Allen key.

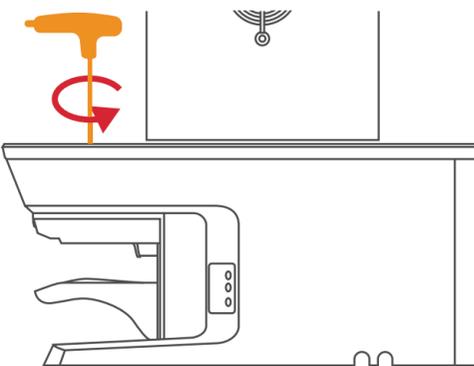

3. Unscrew by turning counter-clockwise and remove the bolt.

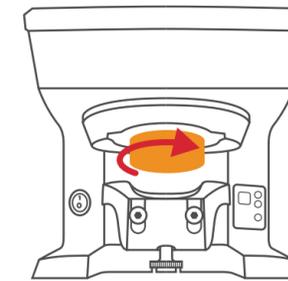


4. Remove tamper base by turning from left to right.

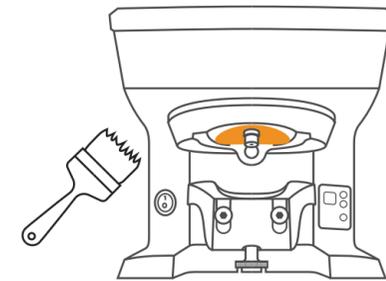

5. Clean cavity with a brush.

A. Activate menu

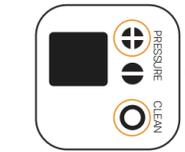

1. Switch off the power. Press and Hold the 'CLEAN' and '+' button while the power is switched back on.

"SE" flashes in the display.



2. Press 'CLEAN' button to step through menu (B to F).

Problems with your puck falling out? Use this setting!

B. Not in use



2. 'SE' not in use. Go to setting C0 by pressing 'CLEAN' button.

C. Change tamp weight setting (KG or LBS)



1. Activate menu and press 'CLEAN' 1 time so that 'C0' is shown (see step A).



2. Use '+' and '-' to change setting.
00 = KG
01 = LBS

3. To finish selection, press 'CLEAN' button 4 times to exit menu.

D. Slow tamp mode



1. Activate menu and press 'CLEAN' 2 times so that 'C1' is shown (see step A).



2. Use '+' and '-' to change setting.
00 = NORMAL TAMPING
01 = SLOW TAMPING



Tamping cycle time increases with 0.8 s.

3. To finish selection, press 'CLEAN' 3 times to exit menu.

E. Firmware version



1. Activate menu and press 'CLEAN' 3 times so that 'C2' is shown (see step A).

2. Press '+' or '-' to see the revision number.

3. Press 'CLEAN' 2 times to exit menu.



Use this funtions only after contact with your local dealer.

F. Reset factory default



1. Activate menu and press 'CLEAN' 4 times so that 'Fr' is shown (see step A).

2. Press '+' and '-' for 1 sec. to reset the device back to default settings.

3. Press 'CLEAN' to exit menu.



Use this funtions only after contact with your local dealer. Cycle counter cannot be reset using this function.

I. Tamping cycle count



In **standby mode**, press and hold '+' and '-' button for **3 sec.**

The display will flash a number for 5 sec. Multiply this number by 5.000 to get cycle count.

II. Cleaning cycle count



1. Press the 'CLEAN' button to bring tamper in cleaning position. Now press and hold '+' and '-' button for **3 sec.**

Multiply this number by 20 to get cycle count.